

Transmission of the wind/rain trip Module 2 WSA 302

Function


Transmission of the wind/rain message from one WSC 304/308/316 Smoke Control Unit to the next Smoke Control Unit.

Installation instructions

- Isolate the Smoke Control Unit (disconnect mains and accumulator).
- Insert module (note the vertical solder pins and the installation position).
- Start Smoke Control Unit up again (connect mains and accumulator).
- Check Smoke Control Unit functions.

Technical data

Transmission: 1 x potential free change-over contact max. 60V DC, 1A.
Green LED display: Green LED lights up when the wind/rain sensor was triggered.

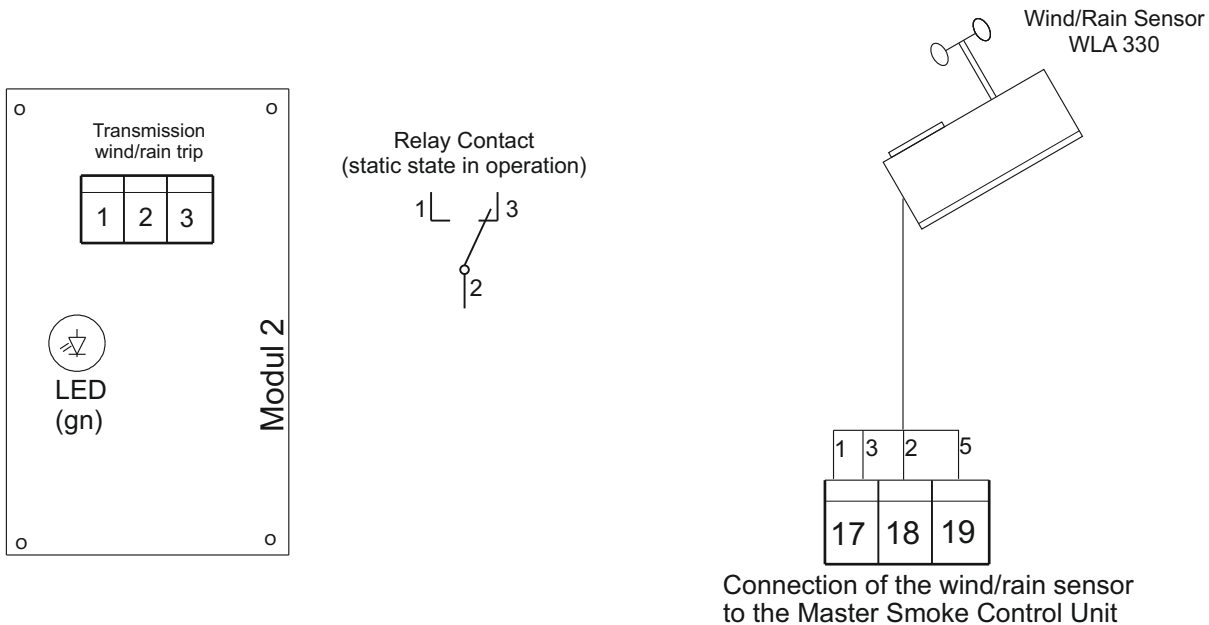

Transmission of the wind/rain signal from one WSC 3xx Smoke Control Unit to the next WSC 3xx Smoke Control Unit



DK +45 4567 0300
DE +49 40 87 409 -560 Vertrieb / -484 Technik
UK +44 1536 614 070
CH +41 62 289 22 22
NO +47 33 99 71 00
US +1 650 360 5414
Others +45 4567 0300

info.dk@windowmaster.com
info.de@windowmaster.com
info.uk@windowmaster.com
info.ch@windowmaster.com
info.no@windowmaster.com
info.us@windowmaster.com
info.dk@windowmaster.com

www.windowmaster.com