

Function

In the ventilation mode, the module causes windows or shutters to automatically close at a set time. In this manner, closing windows or shutters again after opening cannot be forgotten. The delay can be set between 1 and 30 minutes. The timed ventilation module has no function when the potentiometer is set against the right-hand stop.


Installation instructions

- Isolate the control centre (disconnect mains and accumulator).
- Insert module (note the lateral solder pins and installation position).
- Start Smoke Control Unit up again (connect mains and accumulator).
- Check all Smoke Control Unit functions.

Technical data

The windows or shutters automatically close after 1 or 30 min. Following their last opening (depending on the potentiometer setting).

The module has no function when the potentiometer is set against the right-hand stop.

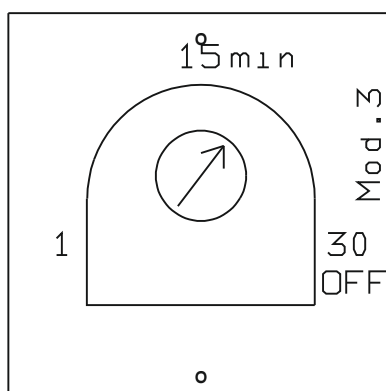

DK	+45 4567 0300
DE	+49 40 87 409 -560 Vertrieb / -484 Technik
UK	+44 1536 614 070
CH	+41 62 289 22 22
NO	+47 33 99 71 00
US	+1 650 360 5414
Others	+45 4567 0300

info.dk@windowmaster.com
info.de@windowmaster.com
info.uk@windowmaster.com
info.ch@windowmaster.com
info.no@windowmaster.com
info.us@windowmaster.com
info.dk@windowmaster.com

www.windowmaster.com