



3.20

## WCC 310 / 320 PLUS MotorController



Natural  
ventilation

230V

Rated voltage



MotorLink®

KNX

KNX product

BACnet

BACnet  
product

Modbus

Modbus  
product

### Application

- for daily comfort ventilation
- to be used with  $\pm 24V$  standard window actuators and window actuators with MotorLink®
- 2, 6 or 10 motor lines
- 10A or 20A
- can be expanded with field bus card with interface for KNX, BACnet IP MS/TP and Modbus TCP/RTU/RS485
- with build-in touch screen for configuration

MotorController for the control of  $\pm 24V$  DC standard actuators and actuators with MotorLink® for daily comfort ventilation. It can also control espagnolette / locking actuators.

The MotorController is used for control of 2, 6 or 10 individual motor lines. The number of actuators, which can be connected on each motor line depends on the type of actuator – see the table “Max numbers of actuators per motor line and MotorController” for type and number.

### Versions

MotorController is supplied in 6 variants:

With 10A:

- WCC 310 P 0202: 10A, 2 motor lines, 2 inputs
- WCC 310 P 0612: 10A, 6 motor lines, 12 inputs
- WCC 310 P 1012: 10A, 10 motor lines, 12 inputs

With 20A:

- WCC 320 P 0202: 20A, 2 motor lines, 2 inputs
- WCC 320 P 0612: 20A, 6 motor lines, 12 inputs
- WCC 320 P 1012: 20A, 10 motor lines, 12 inputs

All versions can be expanded with field bus card.

In the MotorController each motor line can have a max load of 10A. The total max current consumption of all motor lines must not exceed 10A / 20A.

The MotorController is also supplied as a STANDARD version – please see the separate product sheet for further information.

### Description

The MotorController controls (opens/closes) the window actuators based on the signals from the connected components e.g. keypads, room sensor, weather sensor and BUS commands.

We recommend keypads are used in conjunction with ventilation automation to allow local manual user override.

## Communication

The communication between the MotorController and each window actuator is done via a 2 or 3 wire cable this depends, if the actuator has MotorLink® or not.

### Actuators without MotorLink®

The communication is controlled via a 2 wire cable. If a 3 wire cable is used, cable monitoring can be added and is to be selected on the touch screen in the MotorController. The positioning of the windows is based on time control with a limited precision.

### Actuators with MotorLink®

The communication is controlled digitally via MotorLink® in a 3-core (power and communication wire). The position of the window is controlled with millimetre accuracy. This is done via the position feedback from the actuators to the MotorController. Via this communication the system continuously registers the extent of the window opening. The MotorController immediately reports if a malfunction occurs on one of the motor lines.

## Actuator speeds

This MotorController gives the possibility of up to three window actuator speeds depending on the type of actuator connected:

- ±24V DC standard actuator – 1 speed (speed B)
- MotorLink® actuator – 3 speeds  
(safety / manually operated / automatically)

### The different speeds

- A. automatically control speed – actuators run slowly and almost soundlessly.
- B. manual control speed – actuators run faster and more audibly.
- C. safety control speed – actuators run fastest.

## Communication card

The MotorController can be expanded with a communication card (fieldbus card) thus daily comfort ventilation will be possible via bus communication KNX, BACnet IP MS/TP or Modbus TCP/RTU/RS485 together with comfort controls e.g. NV Advance®.

The field bus card is to be ordered separately.

### Card types

- WCA 3FK: KNX interface
- WCA 3FB: BACnet-IP key
- WCA 3FM: BACnet MS/TP / Modbus RTU/RS485 interface

The MotorController is integrated into KNX and BACnet projects using the relevant application. In the application there are a number of communication objects and parameters, which help to ensure a flexible

integration with other KNX/BACnet products and control units.

For further information on available objects see "KNX Application Program Description", "BACnet PICS" and "Modbus register description" on our web site [www.windowmaster.com](http://www.windowmaster.com).

## Configurering / commisioning / maintaining

The MotorController PLUS is configured, commissioned and maintained via the built in LCD touch screen – easy and simple without the use of an external PC.

For easy commissioning and quick troubleshooting when maintaining the system, faults in the system will be displayed on the touch screen.

### Configuration options

- 2 outputs as comfort group 1 respectively comfort group 2
- wind speed sensor to be connected directly
- master/slave when linking with e.g. smoke control panels type WSC 310 or WSC 320
- output when error
- input can be freely configured
- speeds can be configured
- sequence control
- ventilation timer
- 20A on one motor line (only WCC 320)
- event log

## Specifications


- 2, 6 or 10 motor lines (comfort ventilation groups) with up to 10A / 20A
- max. 10A/motor line
- automatically limited opening for comfort ventilation – no additional modules required
- field bus cards are available for KNX, BACnet IP MS/TP and Modbus TCP/RTU/RS485
- max. output voltage 27.6VDC @230VAC
- easy configuration at start up / expanding / rebuilding on the 2½" LCD built in touch screen in the panel – this can also be done on a PC without any additional modules
- the touch screen is also used for quick troubleshooting when maintaining the system
- simple and fast installation

Actuator and power supply cables are quickly and easily connected to the MotorController. The cable access can be made from the top or from underneath the MotorController, which can be mounted vertically or horizontally on the wall.

### Example 1: WCC 310 P 1012 with timer control and wind/rain sensor

In each room actuators with MotorLink® have been connected as well as individual keypads for individual operation of the windows. A room thermostat is mounted, so the windows open / close when the temperature exceeds / falls below the set temperature settings. A control timer for opening/closing windows in room 1 and 2 at predefined times e.g. open/close during lunch time and close all windows at 6PM.


A wind/rain sensor is mounted on the roof.

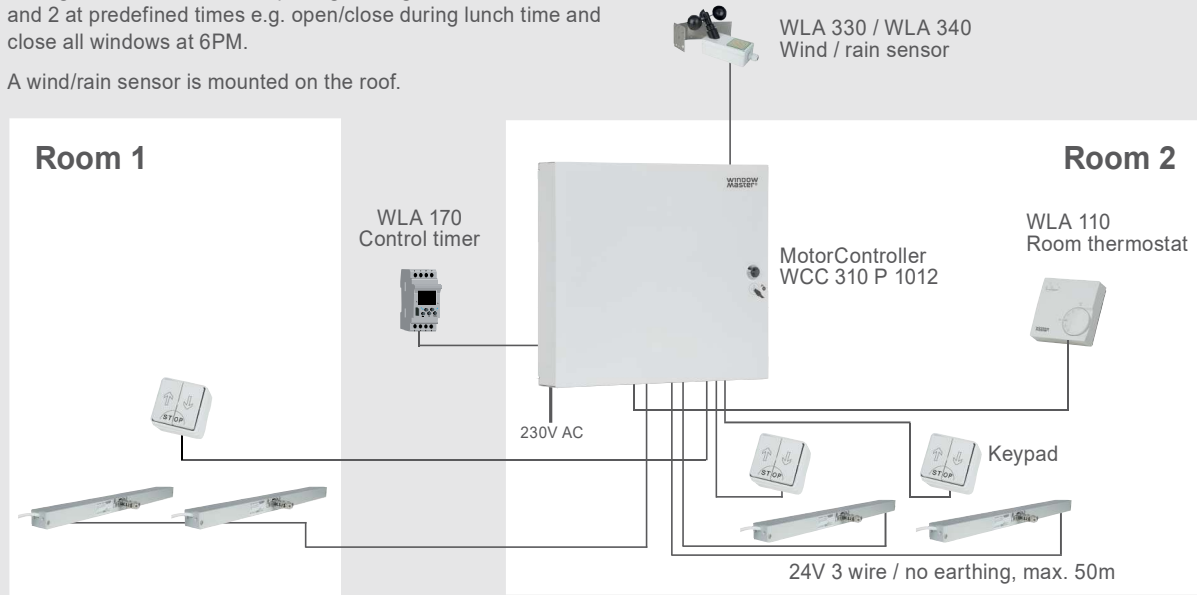

### Example 2: An independent solution – no BMS-integration

- Control of natural ventilation, mixed mode ventilation (incl. mechanical ventilation), heating and solar shading.
- The indoor sensors are connected directly to the MotorController via WSK-Link™.
- The weather station is connected directly to the MotorController.

- The log data is stored in the cloud.
- The configuration is performed on the MotorController screen and/or from the pc.
- Cloud based remote monitoring
- Mobile app

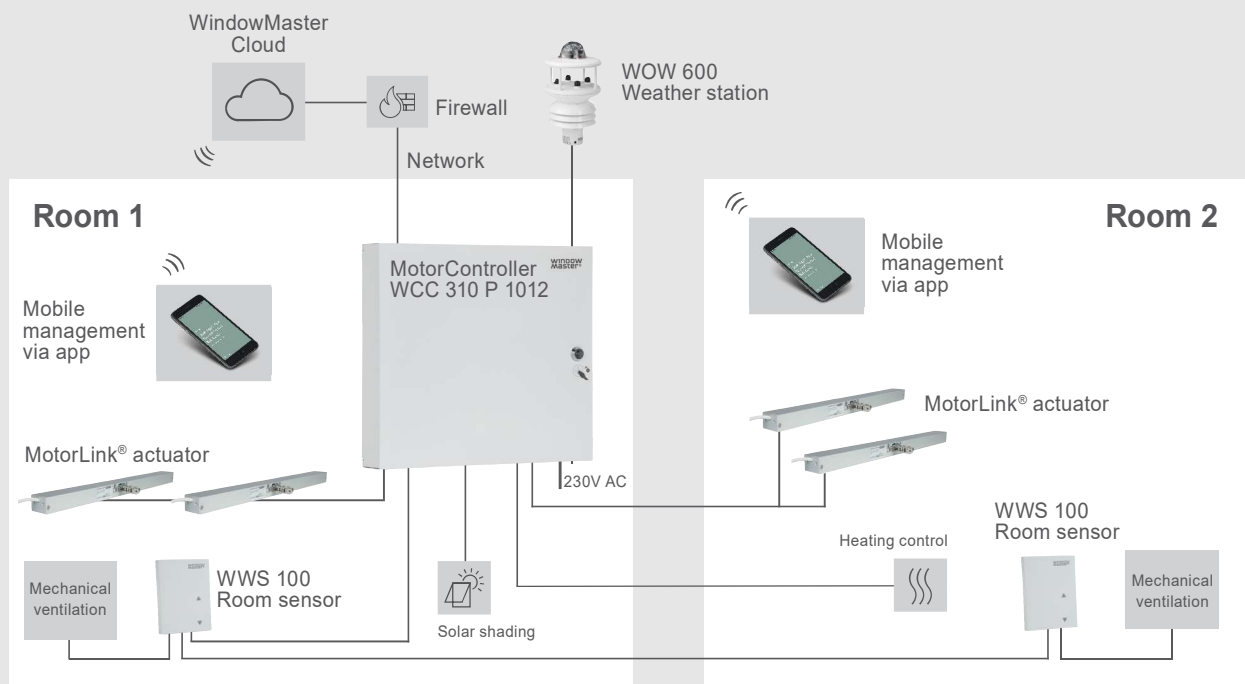

For more information please see the NV Embedded® data sheet

### Example 3: WCC 320 P 1012 expanded with KNX card

The MotorController can control MotorLink® actuators as well as  $\pm 24V$  DC standard actuators. The configuration is easily done in the configuration menu on the touch display.

$\pm 24V$  DC standard actuator

✓ Configuration, Motor line, S1 X1

|                     |                     |
|---------------------|---------------------|
| Output mode         | $\pm 24V$ motor     |
| Motor configuration | No cable monitoring |
| Stroke time         | 60 s                |
| Motor group         | 1                   |


↩ ⬇

MotorLink® actuator

✓ Configuration, Motor line, S1 X1

|                                |            |
|--------------------------------|------------|
| Output mode                    | MotorLink® |
| Expected no. of motors         | 1          |
| Motor group                    | 1          |
| Expected no. of locking motors | None       |

↩ ⬇

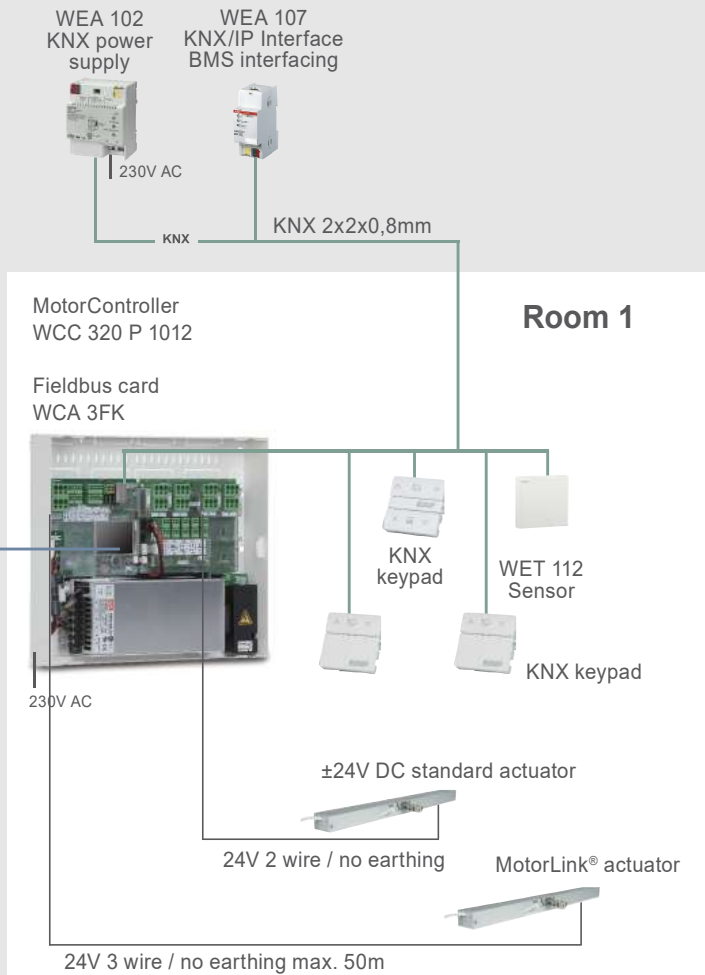

#### Example 4: WCC 320 P 1012 expanded with BACnet MS/TP / Modbus RTU/RS485 card or BACnet-IP key

Two fieldbus modules can turn the WCC MotorController into a BACnet MotorController supporting either:

- BACnet MS/TP or Modbus RTU/RS485
- BACnet IP or Modbus TCP

BACnet configuration is easily done in the BACnet menu on the touch display.

Download PICS / Modbus register description from [www.windowmaster.com](http://www.windowmaster.com)

☒ **Configuration**

BACnet IP

Login

Configuration files, USB

System

↶

↷

☒ **Configuration, BACnet IP**

BACnet IP UDP port number47808


BACnet IP device instance1

Actual position COV increment1%

Actual max. position COV increment1%

↶

↷

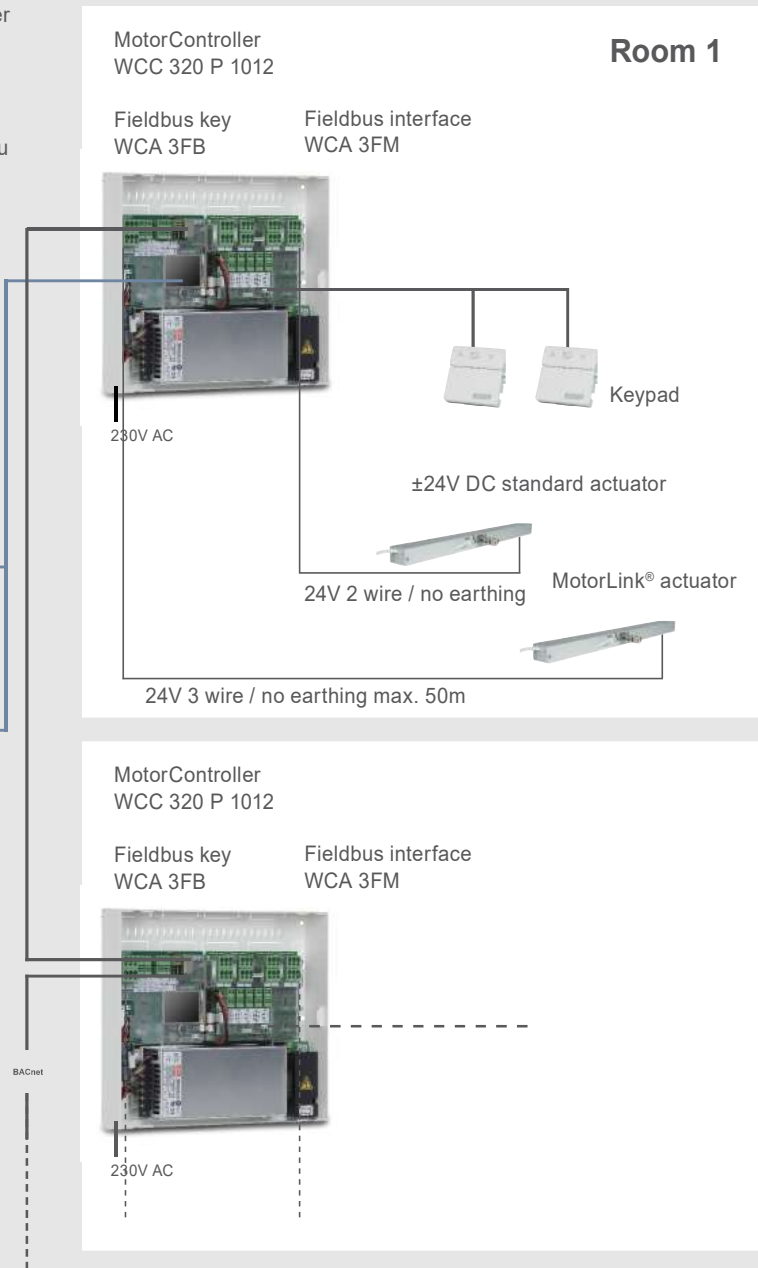

| Technical specifications       |                                                                                                                                                                                                                                                                                              |                                                             |
|--------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------|
| Output current                 | WCC 310: 10A / WCC 320: 20A                                                                                                                                                                                                                                                                  |                                                             |
| Motor lines                    | 2, 6 or 10 motor lines<br>A line can be either a $\pm 24V$ standard motor line or a MotorLink® motor line.                                                                                                                                                                                   |                                                             |
| Primary voltage                | 230V AC, 50Hz (85-264V AC, 47-63Hz)                                                                                                                                                                                                                                                          |                                                             |
| Actuator secondary voltage     | Nominal voltage<br>Open circuit voltage at 230V AC (no load)<br>Ripple at max load                                                                                                                                                                                                           | 24V DC ( $\pm 15\%$ )<br>27,6V DC @ 20°C<br>max 6% (3,5Vpp) |
| Power consumption              | WCC 310: min 2W <sup>1</sup> , typ. 4.2W <sup>2</sup> . At max load 305W<br>WCC 320: min 2W <sup>1</sup> , typ. 5W <sup>3</sup> . At max load 605W<br><br>1) min.: 1 MotorLink® actuator<br>2) min.: 20 MotorLink® actuators + rain sensor<br>3) min.: 40 MotorLink® actuators + rain sensor |                                                             |
| Inrush current on primary site | 70A < 5ms<br>Max 3 x WCC 310/320 per 10 A supply group.<br>Circuit breaker "C" characteristic.                                                                                                                                                                                               |                                                             |
| Leakage current                | max 1.2mA @ 240VAC                                                                                                                                                                                                                                                                           |                                                             |
| AUX                            | 24V DC, 230 mA                                                                                                                                                                                                                                                                               |                                                             |
| Operating conditions           | -5°C – +45°C, for indoor installation, the controller may not be covered                                                                                                                                                                                                                     |                                                             |
| Switch-on duration             | ED 40% (4 min. per 10 min.)                                                                                                                                                                                                                                                                  |                                                             |
| Connection cable               | <b>Actuators</b><br>Flexible max 6mm <sup>2</sup> / solid max 10mm <sup>2</sup> , max. 2V power loss.<br>MotorLink® actuator however cables max. 50m<br><br><b>Other components</b><br>Min 0,2mm <sup>2</sup> / max 1,5mm <sup>2</sup>                                                       |                                                             |
| Size                           | 355 x 320 x 76mm (WxHxD)                                                                                                                                                                                                                                                                     |                                                             |
| Material                       | Lacquered metal housing for surface mounting                                                                                                                                                                                                                                                 |                                                             |
| Colour                         | White (RAL 9010)                                                                                                                                                                                                                                                                             |                                                             |
| Weight                         | WCC 310: 4kg / WCC 320: 4.8kg                                                                                                                                                                                                                                                                |                                                             |
| IP rating                      | IP20                                                                                                                                                                                                                                                                                         |                                                             |
| Delivery includes              | MotorController                                                                                                                                                                                                                                                                              |                                                             |
| Spare parts                    | See the spare part list on our website <a href="http://www.windowmaster.com">www.windowmaster.com</a> under "Products"                                                                                                                                                                       |                                                             |
| Note                           | We reserve the right to make technical changes                                                                                                                                                                                                                                               |                                                             |

## Max numbers of actuators per motor line and MotorController

The table shows the maximum number of actuators, which can be connected per motor line and MotorController depending on the type of actuator ( $\pm 24V$  standard or MotorLink<sup>®</sup> actuator) and MotorController.

**Notice:** For actuators with MotorLink<sup>®</sup> always max. 4 actuators per motor line. The total power consumption of all the connected actuators must not exceed 10A for WCC 310 and 20A for WCC 320.

| WCC 310 / WCC 320 PLUS – maximum numbers of actuators |                |                        |                    |                        |                    |                        |
|-------------------------------------------------------|----------------|------------------------|--------------------|------------------------|--------------------|------------------------|
| Actuator type                                         | Per motor line |                        | Per WCC 310 P 1012 |                        | Per WCC 320 P 1012 |                        |
|                                                       | $\pm 24V$      | MotorLink <sup>®</sup> | $\pm 24V$          | MotorLink <sup>®</sup> | $\pm 24V$          | MotorLink <sup>®</sup> |
| WMD 820-1                                             | 10             | 4                      | 10                 | 10                     | 20                 | 20                     |
| WMD 820-2                                             | 10             | 4                      | 10                 | 10                     | 20                 | 20                     |
| WMD 820-3                                             | 9              | 3                      | 9                  | 9                      | 18                 | 18                     |
| WMD 820-4                                             | 8              | 4                      | 8                  | 8                      | 20                 | 20                     |
| WMS 306-1                                             | 10             | 4                      | 10                 | 10                     | 20                 | 20                     |
| WMS 306-2                                             | 10             | 2                      | 10                 | 10                     | 20                 | 20                     |
| WMS 306-3                                             | 9              | 3                      | 9                  | 9                      | 18                 | 18                     |
| WMS 306-4                                             | 8              | 4                      | 8                  | 8                      | 20                 | 20                     |
| WMS 309-1                                             | 10             | 4                      | 10                 | 10                     | 20                 | 20                     |
| WMS 309-2                                             | 10             | 2                      | 10                 | 10                     | 20                 | 20                     |
| WMS 309-3                                             | 9              | 3                      | 9                  | 9                      | 18                 | 18                     |
| WMS 309-4                                             | 8              | 4                      | 8                  | 8                      | 20                 | 20                     |
| WMS 409 xxxx 01                                       | 5              | -                      | 5                  | -                      | 10                 | -                      |
| WMS 409-1                                             | 5              | 4                      | 5                  | 5                      | 10                 | 10                     |
| WMS 409-2                                             | 4              | 2                      | 4                  | 4                      | 10                 | 10                     |
| WMS 409-3                                             | 3              | 3                      | 3                  | 3                      | 9                  | 9                      |
| WMS 409-4                                             | 4              | 4                      | 4                  | 4                      | 8                  | 8                      |
| WMU 831 / 836 / 851-1                                 | 10             | 4                      | 10                 | 10                     | 20                 | 20                     |
| WMU 831 / 836 / 851-2                                 | 10             | 4                      | 10                 | 10                     | 20                 | 20                     |
| WMU 831 / 836 / 851-3                                 | 9              | 3                      | 9                  | 9                      | 18                 | 18                     |
| WMU 831 / 836 / 851-4                                 | 8              | 4                      | 8                  | 8                      | 20                 | 20                     |
| WMU 861-1                                             | 8              | 4                      | 8                  | 8                      | 16                 | 16                     |
| WMU 861-2                                             | 8              | 2                      | 8                  | 8                      | 16                 | 16                     |
| WMU 861-3                                             | 6              | 3                      | 6                  | 6                      | 15                 | 15                     |
| WMU 861-4                                             | 8              | 4                      | 8                  | 8                      | 16                 | 16                     |
| WMU 842 / 852 / 862 / 882-1                           | 4              | 4                      | 4                  | 4                      | 8                  | 8                      |
| WMU 842 / 852 / 862 / 882-2                           | 4              | 2                      | 4                  | 4                      | 8                  | 8                      |
| WMU 842 / 852 / 862 / 882-3                           | 3              | 3                      | 3                  | 3                      | 6                  | 6                      |
| WMU 842 / 852 / 862 / 882-4                           | 4              | 4                      | 4                  | 4                      | 8                  | 8                      |
| WMU 863 / 883-1                                       | 3              | 3                      | 3                  | 3                      | 6                  | 6                      |
| WMU 863 / 883-2                                       | 2              | 2                      | 2                  | 2                      | 6                  | 4                      |
| WMU 863 / 883-3                                       | 3              | 3                      | 3                  | 3                      | 6                  | 6                      |
| WMU 863 / 883-4                                       | -              | -                      | -                  | -                      | 4***               | 4***                   |
| WMU 864 / 884-1                                       | 2              | 2                      | 2                  | 2                      | 4                  | 4                      |
| WMU 864 / 884-2                                       | 2              | 2                      | 2                  | 2                      | 4                  | 4                      |
| WMU 864 / 884-3                                       | -              | -                      | -                  | -                      | 3***               | 3***                   |
| WMU 864 / 884-4                                       | -              | -                      | -                  | -                      | 4***               | 4***                   |
| WMU 885 / 895-1                                       | 2              | 2                      | 2                  | 2                      | 4                  | 4                      |
| WMU 885 / 895-2                                       | 2              | 2                      | 2                  | 2                      | 4                  | 4                      |
| WMU 885 / 895-3                                       | -              | -                      | -                  | -                      | 3***               | 3***                   |
| WMU 885 / 895-4                                       | -              | -                      | -                  | -                      | 4***               | 4***                   |

Continued on the next page

# WCC 310 / WCC 320 PLUS – maximum numbers of actuators (continued)

| Actuator type                           | Per motor line                                                                |            | Per WCC 310 P 1012 |            | Per WCC 320 P 1012 |            |
|-----------------------------------------|-------------------------------------------------------------------------------|------------|--------------------|------------|--------------------|------------|
|                                         | ± 24V                                                                         | MotorLink® | ± 24V              | MotorLink® | ± 24V              | MotorLink® |
| WMX 503 / 504 / 523 / 526-1             | 20                                                                            | 4          | 20                 | 20         | 40                 | 40         |
| WMX 503 / 504 / 523 / 526-2             | 20                                                                            | 2          | 20                 | 16         | 40                 | 20         |
| WMX 503 / 504 / 523 / 526-3             | 18                                                                            | 3          | 18                 | 18         | 39                 | 30         |
| WMX 503 / 504 / 523 / 526-4             | 20                                                                            | 4          | 20                 | 20         | 40                 | 40         |
| WMX 803 / 804 / 813 / 814 / 823 / 826-1 | 10                                                                            | 4          | 10                 | 10         | 20                 | 20         |
| WMX 803 / 804 / 813 / 814 / 823 / 826-2 | 10                                                                            | 2          | 10                 | 10         | 20                 | 20         |
| WMX 803 / 804 / 813 / 814 / 823 / 826-3 | 9                                                                             | 3          | 9                  | 9          | 18                 | 18         |
| WMX 803 / 804 / 813 / 814 / 823 / 826-4 | 8                                                                             | 4          | 8                  | 8          | 20                 | 20         |
| WML 820 / 825                           | 10                                                                            | 0          | 10                 | 0          | 20                 | 0          |
| WML 860-1                               | 10                                                                            | 4          | 10                 | 10         | 20                 | 20         |
| WML 860-2                               | 10                                                                            | 2          | 10                 | 10         | 20                 | 20         |
| WML 860-3                               | 9                                                                             | 3          | 9                  | 9          | 18                 | 18         |
| WML 860-4                               | 8                                                                             | 4          | 8                  | 8          | 20                 | 20         |
| WMB 801 / 802*                          | Actuators with a total of max. of 4A can be connected to the locking actuator |            |                    |            |                    |            |
| WMB 811 / 812 **                        | 10                                                                            | 2          | 10                 | 10         | 20                 | 20         |

\* Do not exceed the total power consumption of the motor line


\*\* When having two locking actuators on one motor line use: 1 x WMB 811 and 1 x WMB 812

\*\*\* When the motor line is configured as 20A

## MotorLink® combinations: Actuator variants on one MotorLink® motor line

- When connecting window actuators one should pay attention to:
  - The max current load of the MotorControllers is 10A per motor line. The simultaneously max current consumption of all motor lines must not exceed 10A on a WCC 310 and 20A on a WCC 320. Actuators with MotorLink®: max 4 actuators per motor line.
  - The cable length and cross section: max voltage drop 2V in the cable, however max distance between the MotorController and the window actuators is 50m

- Aside from window actuators; espagnolette actuators type WMB 811 / 812 (one single or two double actuators) can be connected to the window. When connecting an espagnolette actuator each window must have its own motor line.

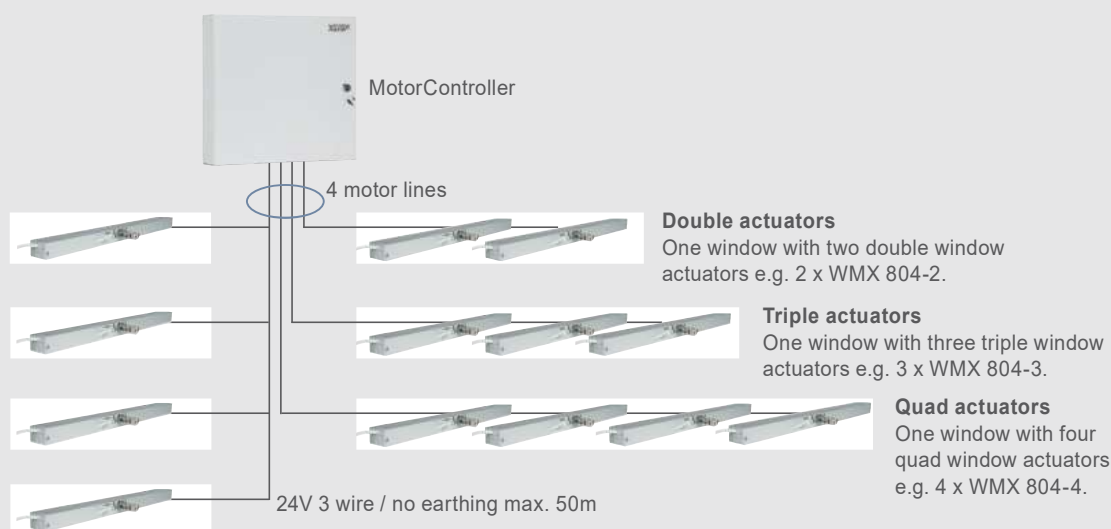

### Single actuator

One window with one single window actuator e.g. 1 x WMX 804-1.

Up to four windows with each one window actuator can be connected e.g. 4 x WMX 804-1.

## WCC 310 / 320 PLUS

# MotorController

| Variants            | Number of motor lines                       | Number of inputs | Item no.       |
|---------------------|---------------------------------------------|------------------|----------------|
| MotorController 10A | 2 motor lines each 10A (in total max. 10A)  | 2 inputs         | WCC 310 P 0202 |
| MotorController 10A | 6 motor lines each 10A (in total max. 10A)  | 12 inputs        | WCC 310 P 0612 |
| MotorController 10A | 10 motor lines each 10A (in total max. 10A) | 12 inputs        | WCC 310 P 1012 |
| MotorController 20A | 2 motor lines each 10A (in total max. 20A)  | 2 inputs         | WCC 320 P 0202 |
| MotorController 20A | 6 motor lines each 10A (in total max. 20A)  | 12 inputs        | WCC 320 P 0612 |
| MotorController 20A | 10 motor lines each 10A (in total max. 20A) | 12 inputs        | WCC 320 P 1012 |

| Accessories                                                                | Item no.          |
|----------------------------------------------------------------------------|-------------------|
| Fieldbus card with field bus interface to KNX                              | WCA 3FK           |
| Fieldbus card with field bus key to BACnet-IP                              | WCA 3FB           |
| Fieldbus card with field bus interface to BACnet MS/TP or Modbus RTC/RS485 | WCA 3FM           |
| Keypad, flush mounting                                                     | WSK 100 1161      |
| Keypad, type FUGA, surface mounting (DK version)                           | WSK 102           |
| Keypad, flush mounting (CH version)                                        | WSK 300           |
| Room thermostat                                                            | WLA 110           |
| Room thermostat KNX: temperature, CO <sub>2</sub> and humidity             | WET 112           |
| Wind/rain sensor                                                           | WLA 330           |
| Rain sensor                                                                | WLA 331           |
| Weather station                                                            | WOW 600           |
| USB stick for log-data, back-up and firmware updates                       | WCA 304           |
| USB stick for NV Embedded®                                                 | NVE Dongle        |
| Comfort keypad for 1 window or 1 window group                              | WSK 110 0A0B      |
| Comfort keypad for 2 windows or 2 window groups                            | WSK 120 0A0B 0A0B |